

# M59B

## PRODUCT INSTALLATION GUIDE

Lumbar support adjustment

Seat height adjustment  
lock & unlock tilt







 

 
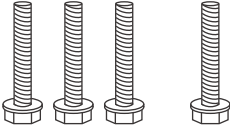

The armrest can  
move up and down

Backrest tilt tension  
adjustment  
● tight ● loose

62\*55\*90(98)CM


Caution ! only adults are allowed to install, keep children away
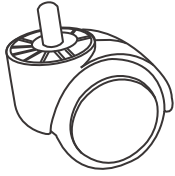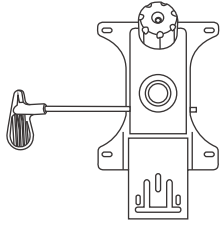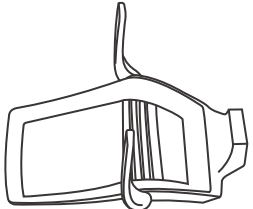
## Parts list (According to the actual size; each type of screw and gasket have a spare)


		
Caster* 5 pcs	Mechanism *1 pc	Backrest*1 pc
		
Seat cushion*1 pc	Hex wrench*1 pc	Gas lift*1 pcs
		
Big shim 3+1 pcs	Small shim 4+1 pcs	Base*1 pc
		
Mechanism screw(M6*20)4+1pcs	Back screw(M8*40)3+1pcs	
		

Caution : before installing the chair, please sort the screws and measure the screw length for installation.


# Installation diagram (subject to actual size)

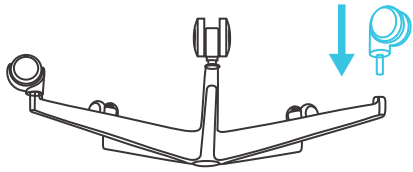

**1** Put the castor into the base by pressing.

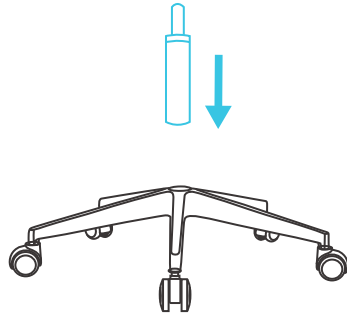


**2** Insert the gaslift to the base.

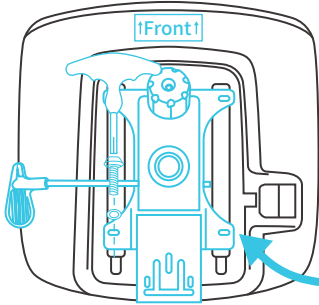

Due to the need of sliding, the mechanism screw cannot be tightened by force at once, Otherwise, the adjustment function will be affected.

**3** Fix the mechanism to the seat cushion with 4pcs(M6\*25)screws and 4pcs small shim. Pay attention to the front and back.

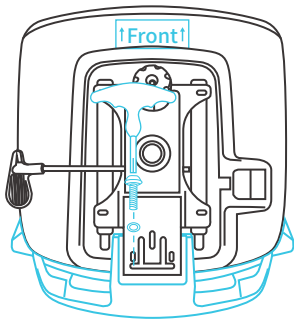

**4** Fix the backrest to the seat cushion with 3pcs(M8\*40)screws and 3pcs big shim screws.



**5** Put the upper part of chair to the gas lift.