












 
 
# M98C

## PRODUCT INSTALLATION GUIDE

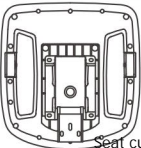


Product Size : 63.5\*60\*111.5(121.5)CM

### Accessories list (subject to actual size, each type of screw has extra for spare, unit: piece/set)

 Caster*5	 Chair base*1	 Gas lift*1	 Chair back*1
 Seat cushion*1	 Armrest*2	 Hexagonal wrench*1	 Plastic limit block*2
 Gasket 3+1	 Chair back screws (M8*40) 3+1	 Armrest screws (ST4*20) 2+1	

### Installation diagram (subject to actual size)

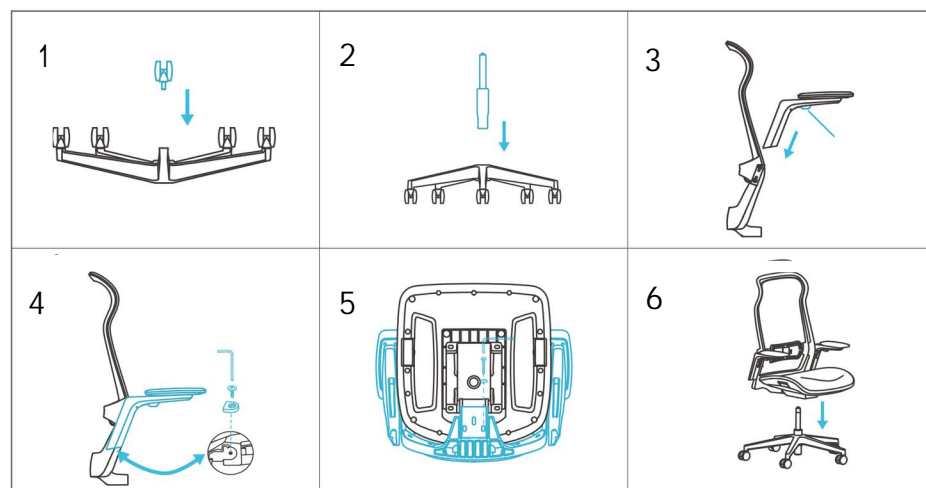

1. Press the wheel into the chair leg
2. Put the air pressure rod into the middle hole of the chair leg with the thin rod end facing up
3. Press the armrest lifting handle and insert the armrest into both sides of the chair back
4. Fix two ST4\*20 screws and plastic limit blocks to the two armrests respectively
5. Use 3 M8\*40 screws and washers to lock the seat back and seat cushion with armrests
6. Align the upper half of the assembled chair and insert the air pressure rod, and the chair is installed

Caution! only adults are allowed to install, keep children away