

K16

Installation procedure






Accessories list (Subject to the actual size; each type of screw is equipped with extra spare screws; Unit: piece/set)

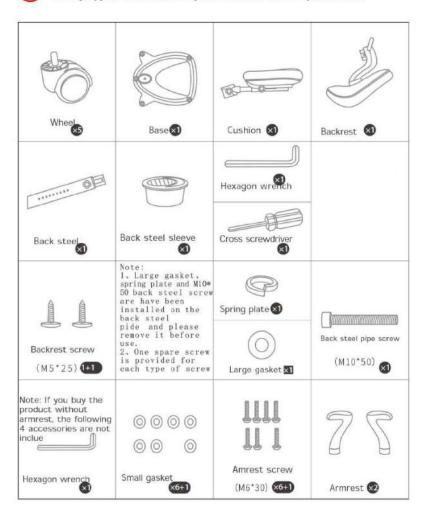






 Please inserte the wheel into the chair base with a little force slantily

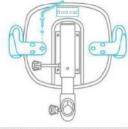

Install the armrest onto the cushion with 6 screws and one M6*30 small gasket


Note: Please forward the side with

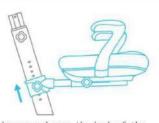

Loosen and open the knob of the seat cushion, insert the seat cushion obliquely into the back steel pipe, and then retighten the knob after positioning



Remove the screws at the bottom of the back steel pipe and align the back steel pipe with the hole inserted into the back steel pipe sleeve to the bottom of the back steel pipe sleeve

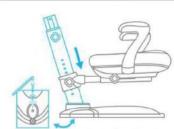

Insert the back steel pipe into the hole on the chair foot, and then install the back steel pipe onto the chair foot with a screw, spring plate and large gasket



Align the hole of the back steel pipe and install the backrest on it with force, then use one M5 * 25 screw to install the backrest on the back steel pipe



