


PRODUCT INSTALLATION GUIDE


M89

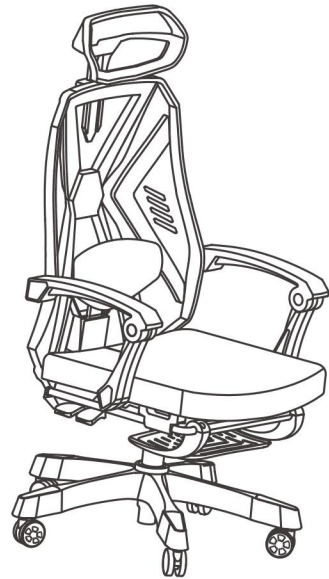






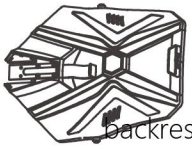


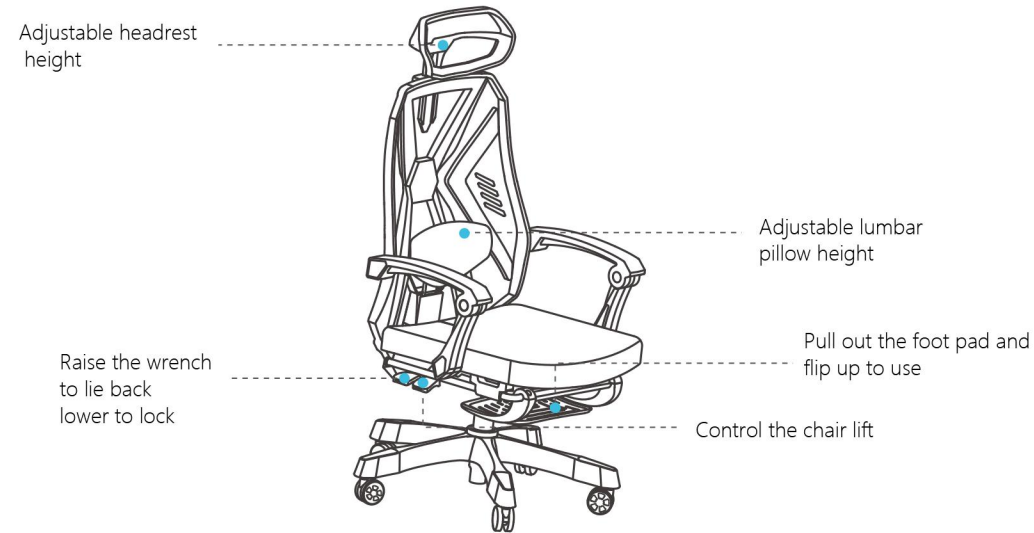





Product Size : 60*68*113.5(131)CM

Caution! only adults are allowed to install, keep children away


Function diagram



Accessories list (subject to actual size, each type of screw has extra for spare, unit: piece/set)

 caster*5	 base*1	 gas lift*1	 seat cushion*1
 decorative cover under the back*1	 backrest*1	 headrest*1	 hex wrench*2
 armrest*2	 armrest decoration cover*2	 armrest support decorative cover*2	 handrail screw (M8*39)*2+1
 back steel plate screw (M8*20)*2+1	 armrest support screw (M8*57)*2+1	Caution! all accessories , prevent children from swallowing	

Installation diagram (subject to actual size)

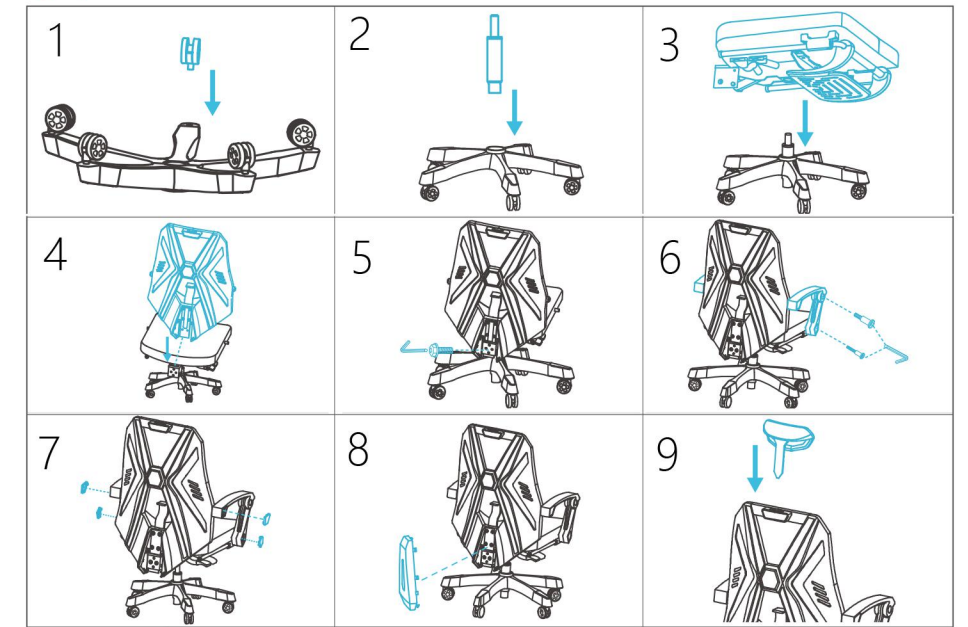

1. Press the caster into the chair leg
2. Put the gas lift into the middle hole of the chair leg
3. Align the chair seat with the mechanism hole and insert the gas lift into it
4. Insert the back steel plate on the chair back into the mechanism hole downward
5. Use 2 M8*20 back steel plate screws to connect back steel plate and mechanism
6. Put the armrest on the rotating shaft of the back frame and the seat cushion. Pay attention to the left and right. First, use 2 M8*39 armrest screws to fix the armrest on the back frame and then use 2 M8*57 armrest support screws to fix the armrest on the seat cushion
7. Put the decorative cover of the armrest and the decorative cover of the armrest into the hole of the armrest
8. Align the decorative cover under the back into the back frame and insert it
9. Insert the headrest into the headrest fixture, and the chair installation is complete